

IMMOBILIZER-Kit for Easy Side Crib 'N' More Assembly Instructions



Recommended: Two People for Assembly

If the hardware photos do not match your crib, **DO NOT** use, and call 1-800-218-2741

NOTE: The color of your hardware and crib may vary from what is pictured.

Before installing immobilizing kit, it is important that there are no broken or missing hardware parts. If parts are missing or broken, **DO NOT USE THE CRIB** and call 1-800-218-2741







WARNING

Failure to follow these warnings and instructions could result in serious injury or death.
The Black Immobilizers must be installed when crib is in use.

For video instructions visit
CribRecallCenter.com

Tools Required: Phillips Screwdriver

FASTENERS ARE DRAWN FULL-SIZE

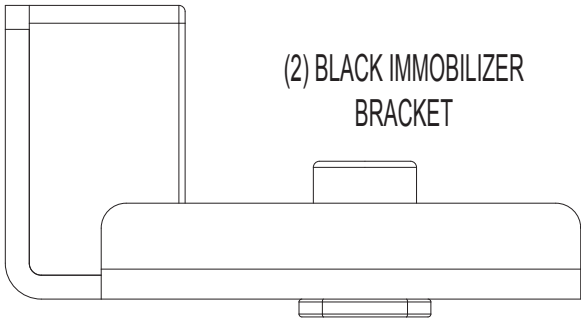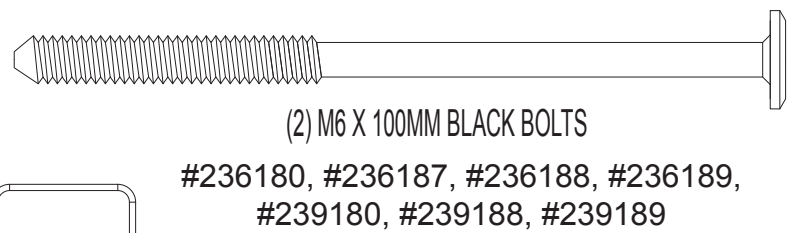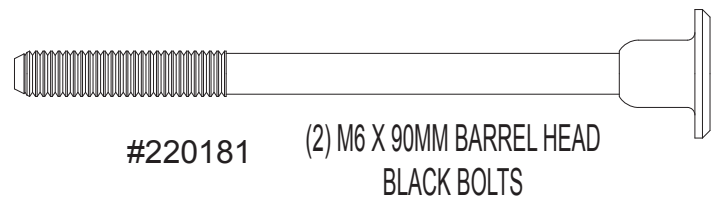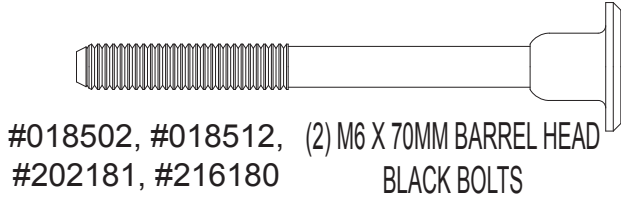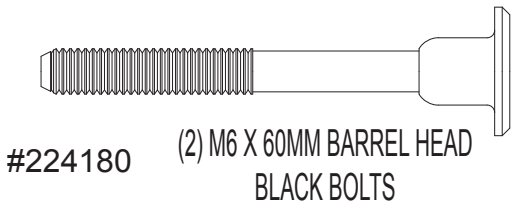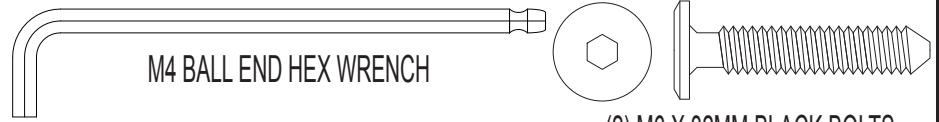

INSTRUCTIONS TO INSTALL IMMOBILIZER KIT


Step #1:

Remove the mattress support from crib by unbolting the 4 mattress support bolts using the M4 hex wrench provided.



Step #2:

Lay crib on it's side (Make sure to lay crib on a padded surface to protect crib and floor). Remove stabilizing bar bolts and nuts using a phillips screwdriver and wrench provided when you purchased your crib. (Throw all removed parts from Step #2 away.)

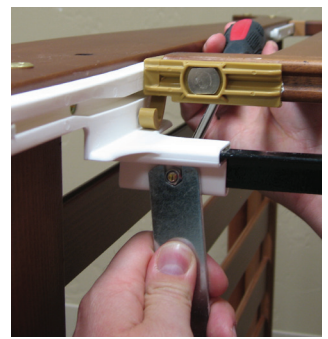

Step #3: Remove Dropside from Crib. Note: you might have to spread bottom of crib apart in order to get dropside off of crib.



Step #4: Remove stabilizing bar. Remove the stabilizing bar brackets left and right using a phillips screwdriver. (Throw all removed parts from Step #4 away.)



Step #5: Remove left and right from brackets dropside by removing the bolt and screw. (Throw all the removed parts from Step #5 away). Note: Some dropsides may not have used the screw.

Screw



Bolt



Step #6: Attach Black Immobilizer brackets to both ends of the dropside with the M6 x 32mm Black Bolts using the M4 hex wrench and multi wrench provided.



Step #7: Slide Dropside onto upper tracks and bolt bottom in place with M6 Black Bolt provided per your crib model.



Step #8: Reattach mattress support using the 4 bolts removed in Step #1 M4 hex wrench provided.



Step #9: Push-down and Pull-Up on top rail of to verify that the immobilizers are properly secured in place. If rail moves up and down on upper tracks, please contact customer care number 1-800-218-2741.

When disassembling crib for storage, follow this instruction sheet in reverse order. Keep these instructions and Immobilizer parts in a safe place for future use.

Note: It is important to periodically inspect your crib for broken or missing parts.